


Manufacturer: Anhui Aerospace & PMA Health Technology Co., Ltd.
Address: 16th PMA Building, National E-commerce Industrial Park,
No. 1201 HuGuang East Rd, ShuShan District, Hefei City, Anhui
Province, China
Producer: Dezhou Aerospace & PMA Graphene Tech. Co., Ltd.
Address: No.6596 Dongfanghong East Road, Yuanqiao Town,
Economic and Technological Development Zone, Dezhou City,
Shandong Province
Website: www.pmagraphene.com
Tel: 86-551-65633848

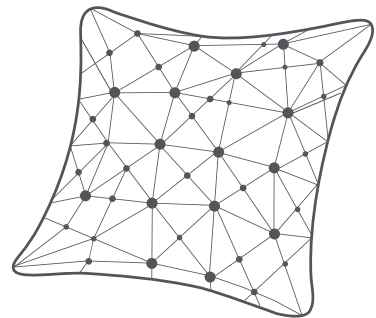


Graphene Far-infrared Heating Pillow Blanket

User Manual

Please read this Manual carefully before use and keep it properly.

Product Introduction:

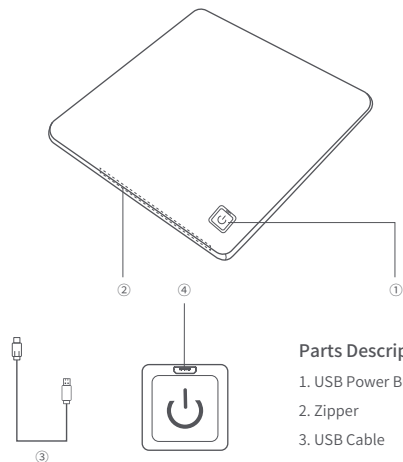

Parts Description:

1. USB Power Button
2. Zipper
3. USB Cable
4. USB Interface

Specification:

Name	Size	Weight	Rated Voltage	Input Parameters	Model	Executive Standard
Graphene Far-infrared Heating Pillow Blanket	42cmx42cm	900±10g	5V	DC5V,2A	K-BZT	GB4706.1 GB/T 22843

Power Connection:

Connect the pillow blanket to a power supply with the USB cable.
Note: This product is applicable to universal USB cables and available to connect with mobile power bank, computer, general power supply, vehicle power supply, etc.

Operation Instruction:

1. Power on
After the power supply is connected, the power indicator flashes in three colors in turn and turns off. Long press Power button for 3 seconds to power the pillow blanket on and automatically enter the high temperature level, the edge light is red.
2. Power off
Long Power button for 3 seconds, the edge light turns off and power the pillow blanket off.
3. In working state (the power indicator and the edge light shall be always on), short press Power button to adjust temperature.



Red light 56 ~ 61 °C
High Temp Level




Blue light 46 ~ 51 °C
Medium Temp Level



Green light 37 ~ 42 °C
Low Temp Level

How to Use:

After connecting the pillow blanket to the power supply, press Power button to power it on and adjust it to a comfortable temperature; unzip it as a throw blanket or pad; zip it as a throw pillow according to the need.

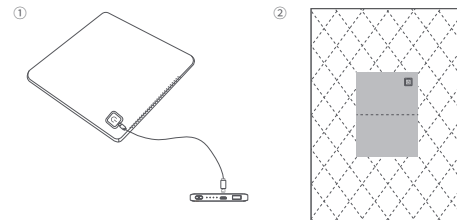

Cautions:

Please keep all ports, plugs and other parts dry;
Pregnant women, infants and people who are not sensitive to temperature should not use this product;
It is not recommended to use it directly close to the body to avoid skin discomfort caused by long-term use of high temperature level;
If you need to wash, please pull the USB cable from the pillow blanket, it is strongly recommended to wash by hand in water, and the temperature shall not exceed 30 degrees;
In order to avoid affecting the heating effect, please use 5V-2A connection power supply strictly according to the instructions in the Manual;
Dry naturally after washing, do not use hair dryers, dry machine and other appliances.